


LanTEK IV Label Printing Guide

LanTEK IV supports label printing connected via USB for the following label printers.

- Dymo Label Manager P&P,
- Dymo Label Manager Wireless P&P
- Brother P-Touch E550W

Step 1

Power on the LanTEK IV and Label printer, connect the USB cable to the printer and the USB type A port on the LanTEK IV.

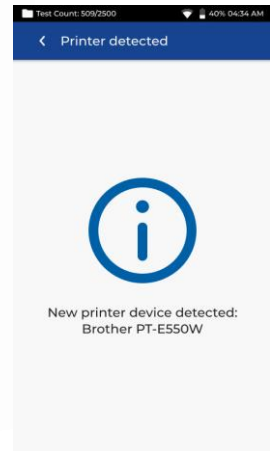


When the printer is successfully connected the “Printer detected” notification will appear on the LanTEK IV.

Select the Printer detected return arrow to navigate to the active job test list.




Step 2 (Printing a single label)

From the jobs list long press the port ID to display the short cut menu. Select Print label.

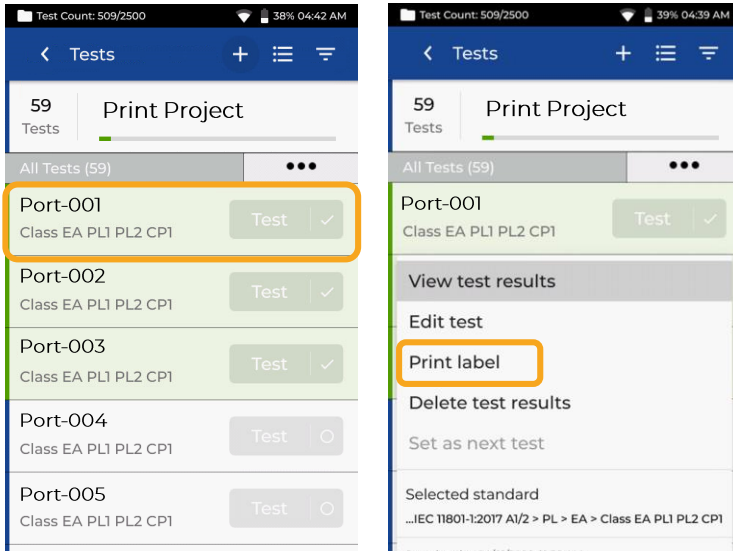


Select the tape size, this must match the size of the tape loaded in the label printer. Select print Label, printing can be cancelled by selecting abort.

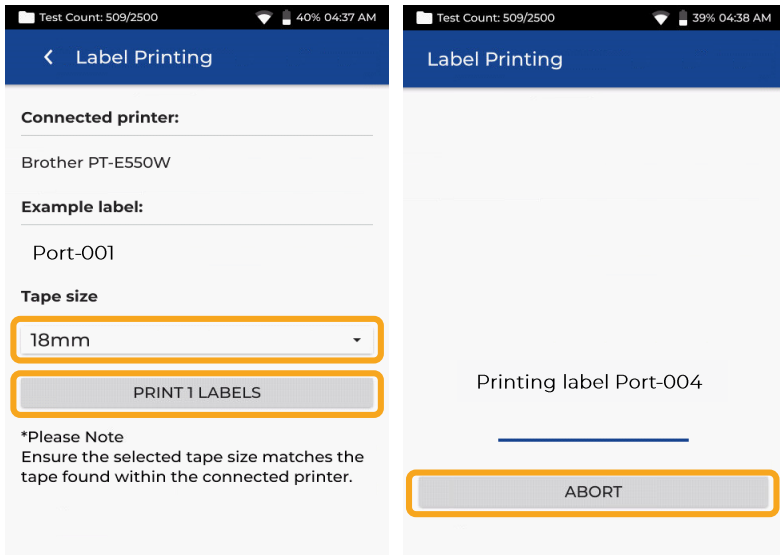


Step 3 (Printing multiple labels)

From the jobs list select the multiple select option. Check the port ID's, select print.

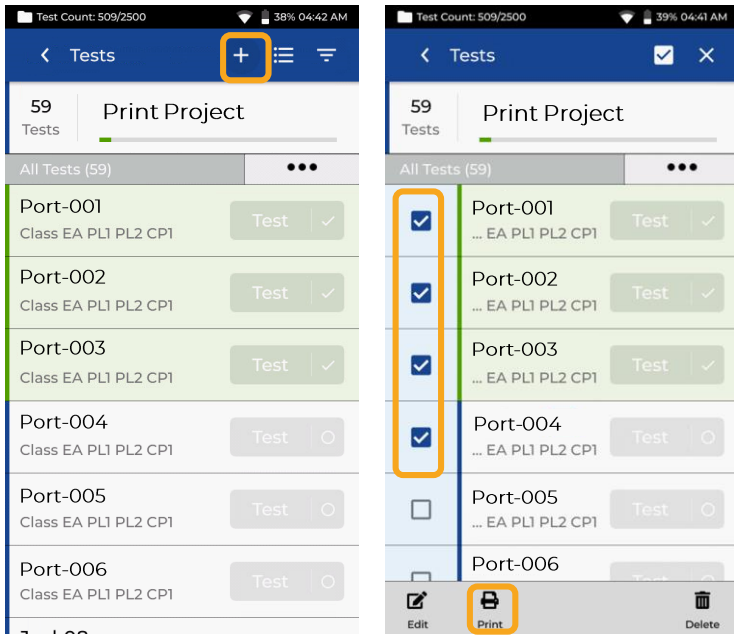

Select the tape size, this must match the size of the tape loaded in the label printer. Select print Label, printing can be cancelled by selecting abort.

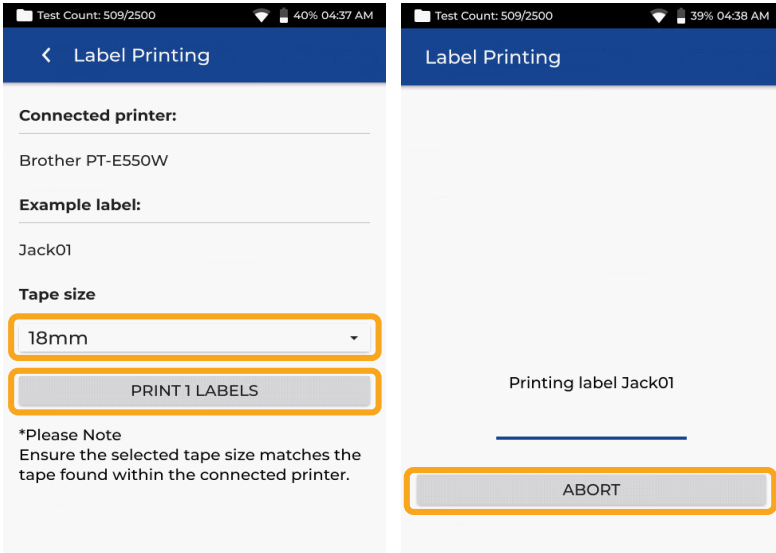



IDEAL NETWORKS

All Rights Reserved. IDEAL, IDEAL NETWORKS and the PoE PRO logos are trademarks or registered trademarks of IDEAL INDUSTRIES Networks Limited.

IDEAL INDUSTRIES Networks Limited
Stokenchurch House, Oxford Road, Stokenchurch
High Wycombe, Buckinghamshire, HP14 3SX
United Kingdom

Tel. +44 (0)1925 428 380 | Fax. +44 (0)1925 428 381

www.idealnetworks.net

Specification subject to
change without notice. E&OE
© IDEAL Networks 2019
158823 Rev.1